

HYUNDAI



CON	TENTS	PAGE
A	APPLICATIONS ED-DIAGNOSTICS.CO.UK	3 - 5
	ARIANIEL ARI	APLANCED APPLICATION OF THE PARTY OF THE PAR
	DIAGNOSTIC SOCKETS/OBD PORTS	6-7
C	WWW.ADVANCED-DIAGNOSTICS.CO.UK SPECIAL FUNCTIONS PIN CODES UPDATING ADC190 SMARTRA CAN PROXIMITY	8 - 9 10 - 11 12 - 13 14 15 - 18
	TIPS & HINTS WWW.ADUSA.US	19 - 22
	REMOTE PROGRAMMING	23
	AV.S	

APPLICATIONS





HYUNDAI (ADS118)

		9		1234	1234	PRO		AD100
ACCENT	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
АМІСА	ALL	✓	×		✓	ADC151	А	ADC110-B
ATOS	ALL	✓	×	✓	✓	ADC151	Α	ADC110-B
AZERA	ALL	✓	×	~ /	✓	ADC151	Α	ADC110-B
CENTENNIAL	ALL	✓	×	✓	✓	ADC151	Α	ADC110-B
COUPE	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
ELANTRA	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
EXCEL	ALL	/	ΛΛΧΛΛ	AĎUS	A IÍS	ADC151	Α	ADC110-B
GALLOPER II	ALL	✓	×	✓	✓	ADC151	Α	ADC110-B
GETZ	ALL	Y	✓	√	\ \ \	ADC151	Α	ADC110-B
GK	ALL	✓	×	✓	✓	ADC151	Α	ADC110-B
GRANDEUR	ALL	V	×		√	ADC151	A	ADC110-B
H-1	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
H-1 TRUCK	ALL	✓	×	X	✓	ADC151	Α	ADC110-B
H-100	ALL	✓	×	✓	✓	ADC151	Α	ADC110-B
H-100 TRUCK	ALL	γί⁄Δ	NČEI)-DIAG	NÓST	ADC151		ADC110-B
HD COUPE	ALL	✓	×	✓	✓	ADC151	Α	ADC110-B
MARCIA	ALL	√	×	V	✓	ADC151	Α	ADC110-B
MATRIX	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
S COUPE	ALL	1	×		1	ADC151	A	ADC110-B
SANTA FE	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
SANTAMO	ALL	✓	×	✓	✓	ADC151	Α	ADC110-B
SONATA	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
TAXI	ALL	✓	×	✓	✓	ADC151	Α	ADC110-B
TERRACAN	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
TIBURON	ALL	✓	×	✓	✓	ADC151	Α	ADC110-B
TRAJET XG	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
TUCSON	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
XG 25	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B
XG 30	ALL	✓	✓	✓	✓	ADC151	Α	ADC110-B

APPLICATIONS





HYUNDAI USA (ADS118)

- db		Q		1234	1234	PRO		AD100
TIBURON	2004 ⇒	✓	×	✓	✓	ADC151	Α	ADC110-B
AZERA	2005 ⇒	✓	×	/ / /	✓	ADC151	Α	ADC110-B
SPORTAGE	2005 ⇒	✓	×	✓	✓	ADC151	Α	ADC110-B
XG300	2004 ⇒	✓	×	✓	✓	ADC151	Α	ADC110-B
XG350	2004 ⇒	✓	*	✓	✓	ADC151	Α	ADC110-B

APPLICATIONS





HYUNDAI CAN & REMOTES (ADS148)

		()		1234	1234	PRO		AD100
ACCENT	2003 ⇒ 2005		√*		7	ADC151	А	ADC110-B
ELANTRA	2001 ⇒ 2006		√ *			ADC151	Α	ADC110-B
GETZ	2003 ⇒ 2005		√ *	160.		ADC151	А	ADC110-B
H-1	2002		√ *			ADC151	Α	ADC110-B
H-1 TRUCK	2002		×*			ADC151	Α	ADC110-B
I10 (CAN) *	2008 ⇒	✓	✓	✓	@	ADC151	Α	×
120 (CAN) *	2008 ⇒	✓	~	W.ADU	S-@	ADC151	Α	×
130 (CAN) *	2008 ⇒	✓	✓	✓	@	ADC151	Α	×
IX35 (PROX) *	2010 ⇒	\	✓	✓	@	ADC151	A	×
MATRIX	2002 ⇒ 2006		√ *			ADC151	Α	ADC110-B
SANTA FE	2001 ⇒ 2006		√*			ADC151	А	ADC110-B
SANTA FE (CAN)	2006 ⇒	✓	✓	✓	@	ADC151	Α	ADC110-B
SONATA	1999 ⇒ 2004		√ *			ADC151	А	ADC110-B
TERRACAN	2001 ⇒ 2006		√ *			ADC151	Α	ADC110-B
TRAJET XG	2001 ⇒ 2006		√ *		40	ADC151	А	ADC110-B
TUSCON (CAN)	2009	✓	✓	✓	@	ADC151	Α	ADC110-B
VERACRUZ(CAN)	2007	V	✓	√ /\\	@	ADC151	Α	ADC110-B
XG 25	1999 ⇒ 2005		√*			ADC151	Α	ADC110-B
XG 30 *	1999 ⇒ 2005		√ *	060		ADC151	Α	ADC110-B

* Pro Only

DIAGNOSTIC SOCKETS/PORTS





HYUNDAI



GETZ



SANTA FE



COUPE 2001



SONATA



TRAJET



ACCENT



AMICA



ACCENT



ELANTRA



COUPE 2



NEW ACCENT



i20

DIAGNOSTIC SOCKETS/PORTS









SONATA (CAN)



10



TUSCON

WWW ADVANCED-DIAGNOSTICS CO UK

WWW.ADUSA.US





PIN CODES

Pin codes for Hyundai are either 4, 5 or 6 digits and can be obtained as follows:

Fixed Pin Code

4 digit pin code, which is 2345. Note: the pin code can be changed on the vehicle via the diagnostic equipment.

Early Hyundai (upto approx 2006)

5 Diait

This uses the last 5 digits of the VIN number into the security code. Also refer to TIPS & HINTS section

6 Digit

This can be obtained using the Kia/Hyundai pin code convertor software ADS132, which converts the last 6 digits of the VIN number into the security code.

Late Hyundai (2007 >)

The pin code for these vehicles needs to be obtained either from the dealer, via the pin code service on the Advanced Diagnostics website or by using ADC190 Pin Code dongle.

NOTE: Dependant on the vehicle build, means some vehicles after 2007 could possibly use the pin code derived from the 6 digits of the VIN, using ADS132 software.



ADS132 6 Digit VIN to PIN - Hyundai <2006


VEHICLE SELECTION + HYUNDAI + INFINITI + ISUZU + IVECO + JAGUAR + JEEP






VEHICLE SELE	ECTION
+ AUS	VAAAA
+ EURO	
+ USA/CANADA	
+ PINCODE CONVERTO	OR



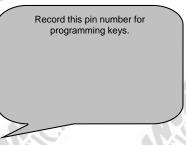

Finished



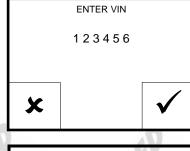

VIN TO PINCODE

PLEASE WAIT
.......

PIN CODE CONVERTOR

PRESS ENTER KEY







ADC190 VIN to PIN Convertor - Hyundai 2007>

Enter the complete 17 digits of the VIN

VEHICLE SELECTION

- + HYUNDAI
- + INFINITI
- + ISUZU
- + IVECO
- + JAGUAR
- + JEEP

number.

HYUNDAI KIA PINCODE

VIN: KMHJN81BR9U123999

PIN: 503346

PLEASE TURN OFF

VEHICLE SELECTION

- + AUS
- + EURO
- + USA/CANADA
- + PINCODE CONVERTOR

HYUNDAI KIA PINCODE

 1
 2
 3
 4
 5

 6
 7
 8
 9
 0

Record this pin number for programming keys.

VEHICLE SELECTION

- + 6 DIGIT VIN-PIN
- + ADC190 VIN-PIN 07>

HYUNDAI KIA PINCODE

KMHJN81BR9U123999





Finished

PIN CODE CONVERTOR

PRESS ENTER KEY

HYUNDAI KIA PINCODE

PLEASE WAIT

WWW.ADUSA.US





UPDATING ADC190

The ADC190 will need updating periodically as more vehicles are produced and therefore more VIN numbers are also Introduced.

To update the ADC190, please follow the instructions below:


Install the ADC190 loader program from the **DOWNLOADS** section of the Advanced Diagnostics website.


Update Procedure

- 1. Connect the ADC190 dongle to the PC via a USB cable. Note: For the first time allow the driver to automatically install
- 2. Open the ADC190 program by double clicking the icon on your desktop.




- 3. The following screen box will be displayed.
- Click the Check For Update button to download the latest software.

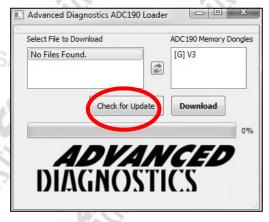

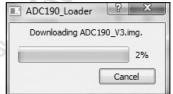

- 5. When completed the latest file will be displayed.
- 6. Click the **DOWNLOAD** button.

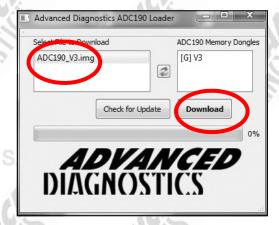

Version: 3.2 JAN 2012


Copyright 2012






7. The latest file will be downloaded.

WWW.ADVANCED-DIA

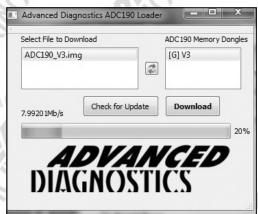

10. The process is completed when indicated.

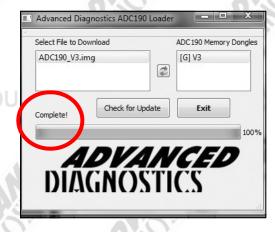

- Click EXIT on the program.
- 12. The ADC190 has now been update with the latest data and is ready to use.

 NOTE: There may be a delay between the very latest vehicles to roll off the production line and information being available to download. This will be kept to as minimal as possible.

-WWW.ADUSA.US

ADVANCED DIAGNOSTICS







SMARTRA 6 DIGIT SYSTEM

KEY PROGRAMMING

VEHICLE SELECTION

- + HYUNDAI
- + INFINITI
- + ISUZU
- + IVECO
- + JAGUAR
- + JEEP

VEHICLE SELECTION

- + EURO
- + USA
- + MIDDLE EAST

VEHICLE SELECTION

- + IMMOBILISER
- + REMOTE FUNCTIONS
- + PINCODE

VEHICLE SELECTION

- + BY VEHICLE
- + BY SYSTEM

VEHICLE SELECTION

- + GETZ
- + GALLOPER 11
- + GRANDEUR
- + HD COUPE
- + 110
- +130

VEHICLE SELECTION

+ 03 - 06

VEHICLE SELECTION

- + PETROL
- + DIESEL

VEHICLE SELECTION

- + TYPE 1
- + TYPE 2
- + TYPE 3

SWITCH IGNITION ON

PRESS ENTER KEY

ECU IDENTIFICATION

HYUNDAI 2

PRESS ENTER KEY

DIAGNOSTIC MENU

ECU IDENTIFICATION

SPECIAL FUNCTIONS

DIAGNOSTIC MENU

> KEYS PROGRAMMED PROGRAM KEYS

LIMP HOME MODE NEUTRALISE

KEYS PROGRAMMED

KEYS: 2

ECU STATUS: LEARNT KEY STATUS: VIRGIN

PRESS ENTER KEY

DIAGNOSTIC MENU

KEYS PROGRAMMED

> PROGRAM KEYS

LIMP HOME MODE

NEUTRALISE

ENTER THE SECURITY CODE. REFER TO PIN CODE SECTION. TO CONVERT THE LAST 6 DIGITS OF THE VIN NUMBER.

NOTE:

ALL GETZ WILL BE A 6 DIGIT PIN CODE



SECURITY CODE

123456





PROGRAM KEYS

SWITCH IGNITION ON

AND THEN PRESS ENTER







SMARTRA 6 DIGIT SYSTEM

PROGRAM KEYS

BACK' TO EXIT

NEXT KEY

PROGRAM KEYS

INSERT NEXT KEY
AND THEN PRESS ENTER

PROGRAM KEYS

SWITCH IGNITION ON AND THEN PRESS ENTER

PROGRAM KEYS

BACK' TO EXIT

ENTER' TO PROGRAM

NEXT KEY

REPEAT FOR ALL KEYS TO BE PROGRAMMED. WHEN PROGRAMMING COMPLETED PRESS BACK TO EXIT.

PROGRAM KEYS

PROCEDURE COMPLETE

PRESS ENTER KEY

KEYS PROGRAMMED

KEYS:

ECU STATUS: LEARNT KEY STATUS: LEARNT

PRESS ENTER KEY

Finished

WWW.ADUSA.US

ADVANCED-DIAGNOSTICS.CO.UK

-WWW.ADUSA.US







HYUNDAI CAN

KEY PROGRAMMING

VEHICLE SELECTION

- + HYUNDAI
- + INFINITI
- + ISUZU
- + IVECO
- + JAGUAR
- + JEEP

VEHICLE SELECTION

- + EURO
- + USA
- + MIDDLE EAST

VEHICLE SELECTION

- + IMMOBILISER
- + REMOTE FUNCTIONS
- + PROXIMITY
- + PINCODE

VEHICLE SELECTION

+ BY VEHICLE

+ BY SYSTEM

VEHICLE SELECTION

- + ACCENT
- + AZERA
- + ELANTRA
- + ENTOURAGE + GENESIS
- + SANTA FE

SWITCH IGNITION ON

PRESS ENTER KEY

ECU IDENTIFICATION

HYUNDAI CAN

PRESS ENTER KEY

DIAGNOSTIC MENU

ECU IDENTIFICATION

LIVE DATA

SPECIAL FUNCTIONS

DIAGNOSTIC MENU

> KEYS PROGRAMMING

NEUTRAL MODE

ENTER THE SECURITY CODE. REFER TO PIN CODE SECTION THIS CAN BE OBTAINED FROM THE AD WEBSITE.

NOTE: ALL CAN VEHICLES WILL BE A 6 DIGIT PIN CODE

SECURITY CODE

1	2	3	4	5
6	7	8	9	0

SECURITY CODE

123456



KEY PROGRAMMING

KEY PROGRAMMED BACK' TO EXIT ENTER' TO PROGRAM

NEXT KEY

KEY PROGRAMMING

REMOVE KEY FROM IGN. THEN INSERT NEXT KEY **IGNTION ON**

PRESS ENTER KEY

REPEAT FOR ALL KEYS TO BE PROGRAMMED. WHEN PROGRAMMING COMPLETED PRESS BACK TO EXIT.

KEY PROGRAMMING

KEY PROGRAMMED

BACK' TO EXIT

ENTER' TO PROGRAM

NEXT KEY

KEY PROGRAMMING

PROCEDURE COMPLETE

PRESS ENTER KEY

Finished







HYUNDAI PROXIMITY

PROGRAMMING

VEHICLE SELECTION

- + HYUNDAI
- + INFINITI
- + ISUZU
- + IVECO
- + JAGUAR
- + JEEP

VEHICLE SELECTION

- + EURO
- + USA
- + MIDDLE EAST

VEHICLE SELECTION

- + IMMOBILISER
- + REMOTE FUNCTIONS
- + PROXIMITY
- + PINCODE

VEHICLE SELECTION

- + BY VEHICLE
- + BY SYSTEM

VEHICLE SELECTION

- + GENESIS
- + VERACRUZ

VEHICLE SELECTION

- + COUPE
- + SEDAN

SWITCH IGNITION OFF SWITCH HAZARDS ON

PRESS ENTER KEY

ECU IDENTIFICATION

HYUNDAI PROX

PRESS ENTER KEY

DIAGNOSTIC MENU

ECU IDENTIFICATION

SPECIAL FUNCTIONS

DIAGNOSTIC MENU

> KEYS PROGRAMMED CLEAR/PROGRAM PROX

KEYS PROGRAMMED

KEYS: 2

PRESS ENTER KEY

DIAGNOSTIC MENU

KEYS PROGRAMMED

> CLEAR/PROGRAM PROX


CLEAR KEYS

WARNING

ALL KEYS WILL BE

CLEARED

CONTINUE

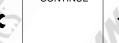

CLEAR/PROGRAM PROX

SWITCH IGNITION OFF

INSERT KEY

PRESS ENTER KEY

ENTER THE SECURITY CODE. REFER TO PIN CODE SECTION.

NOTE: ALL CAN VEHICLES WILL BE A 6 DIGIT PIN CODE

SECURITY CODE

2 1 3 4 5 6 7 9 8 0

SECURITY CODE

123456





PROGRAM KEYS

BACK' TO EXIT

ENTER' TO PROGRAM

NEXT KEY





HYUNDAI PROXIMITY

KEY PROGRAMMING

CLEAR/PROGRAM PROX

INSERT NEXT PROX KEY **IGNITION OFF** AND THEN PRESS ENTER

REPEAT FOR ALL KEYS TO BE PROGRAMMED. WHEN PROGRAMMING

COMPLETED PRESS BACK TO EXIT.

PROGRAM KEYS

BACK' TO EXIT ENTER' TO PROGRAM **NEXT KEY**

KEY PROGRAMMING

PROCEDURE COMPLETE

PRESS ENTER KEY

Finished

ADVANCED DIAGNOSTICS







HYUNDAI PROXIMITY - iX35

KEY PROGRAMMING

VEHICLE SELECTION

- + HYUNDAI
- + INFINITI
- + ISUZU
- + IVECO
- + JAGUAR
- + JEEP

VEHICLE SELECTION

- + EURO
- + USA
- + MIDDLE EAST

VEHICLE SELECTION

- + IMMOBILISER
- + REMOTE FUNCTIONS
- + PROXIMITY
- + PINCODE

VEHICLE SELECTION

- + BY VEHICLE
- + BY SYSTEM

VEHICLE SELECTION

+ ix35

VEHICLE SELECTION

+ COUPE

+ SEDAN

SWITCH IGNITION OFF

PRESS ENTER KEY

ECU IDENTIFICATION

HYUNDAI PROX

PRESS ENTER KEY

DIAGNOSTIC MENU

ECU IDENTIFICATION

SPECIAL FUNCTIONS

DIAGNOSTIC MENU

> PROGRAM PROX KEYS

PROX KEY INFORMATION

IINDICATES THE NUMBER OF PROXIMITY KEYS CURRENTLY PROGRAMMED TO THE VEHICLE.

MAX 2

PROX KEY INFO

? PROX. KEY PROGRAMMED

PRESS ENTER KEY

DIAGNOSTIC MENU

KEYS PROGRAMMED

> PROGRAM PROX KEY

CLEAR KEYS

WARNING

ALL KEYS WILL BE

CLEARED

CONTINUE

X



PROGRAM PROX KEY

INSERT PROX KEY

INTO SLOT

PRESS ENTER KEY

ENTER THE SECURITY CODE. REFER TO PIN CODE SECTION.

NOTE: ALL CAN VEHICLES WILL BE A 6 DIGIT PIN CODE

SECURITY CODE

1 2 3 5 9 6 7 8 0

SECURITY CODE

123456

ADVANCED DIAGNOSTICS





HYUNDAI PROXIMITY - iX35

SELECT THE NUMBER OF PROX KEYS TO BE PROGRAMMED.

NUMBER OF KEYS HAS TO BE 1 OR 2..

MAX PROX KEYS = 2

PROGRAM PROX KEYS

NO. OF PROX KEYS REQD

1	2	3	4	5
6	7	8	9	0

PROGRAM PROX KEYS

PROX KEYS REQD 2





PROGRAM PROX KEYS

IF ONLY ONE KEY HAS BEEN
SELECTED, THEN THE PROCEDURE
COMPLETE SCREEN WILL BE
DISPLAYED.

IF TWO KEYS ARE REQUIRED, THEN THE FOLLOWING SCREENS WILL BE DISPLAYED

PROGRAM PROX KEYS

REMOVE PROX KEY
FROM SLOT

PRESS ENTER KEY

PROGRAM PROX KEYS

INSERT NEXT PROX KEY
INTO SLOT

PRESS ENTER KEY

PROGRAM PROX KEYS

2 PROX KEYS PROGRAMMED PROCEDURE COMPLETE

REMOVE PROX KEY
FROM SLOT

PRESS ENTER KEY

Finished

.ADVANCED-DIAGNOSTICS.CO.UK

-WWW.ADUSA.US

TIPS & HINTS





Key programming with Master Key

Elantra, Lantra, Coupe, S Coupe, Sonata, Sonica, Accent
Atos, Starex
1996 +
1998 +
1999 +

Procedure

- 1. Insert Master Key in ignition.
- Switch Ignition OFF to ON 5 times.
- 3. Remove Master key.
- 4. Insert NEW key into IGNITION and TURN IGNITION ON.
- 5. Turn ignition OFF and remove key.
- 6. Repeat 4 to 5 for all additional keys and any existing keys.

When programming keys, please note the following:

- a. If an existing key is not registered at this stage then it will be deleted from the system.
- b. The procedure from 3 to 5 must be completed within 15 seconds.
- c. The immobiliser control unit does not return any information to the tester about the key programming procedure, therefore it is possible to input an incorrect security code and continue through the programming procedure.
- d. When programming a key, the horn will sound for 0.2 second to signify the key programming action.
- e. Once the first key has been programmed you should turn the ignition on with a second key and wait for 10 seconds, the horn should again sound. If it doesn't, switch on the HRW (Heated Rear Window Switch) to complete the programming phase.
- f. 2 keys must be programmed to close the procedure.

Notes:

- a. The transponder aerial has a resistance of 21.5 Ohms
- b. Hyundai & Kia vehicles need the clutch to be depressed to start the vehicle.
- c. A new aerial does not require programming.

Fault Code List

P1609	Immobiliser SMARTRA error or transponder error
P1610	Immobiliser SMARTRA error
P1677	ECM memory error- if fault will not clear, replace ECM and re-learn keys
P1678	No ECM request- check continuity of wiring between Immobiliser control module pin 6 and the ECM pin 3
P1679	ECM message error - check continuity of wiring between Immobiliser control module pin 6 and the ECM pin 3. If necessary replace ICM
P1690	SMARTRA no response or message error
P1691	Transponder aerial fault- Check for continuity between ICM harness connector terminal 1 and antenna coil harness connector terminal 2. Check for continuity between ICM harness connector terminal 3 and antenna coil harness connector terminal 1. If wiring is OK, replace the transponder aerial.
P1692	Immobiliser warning lamp fault- If the warning light bulb is working replace the ICM. Otherwise, check bulb and then continuity of terminal 7 Cluster harness connector and 17/81 of ECM connector.
P1693	Transponder no response or programming error- Program keys. If the fault persists, replace keys. ICM locks for 1 hour when incorrect PIN tried 3 times.
P1694	ECM message error- Check for continuity between SMARTRA connector terminal 5 and ECM harness side connector terminal 47. If OK, replace ECM
P1695	ECM memory error- re-code existing keys. If code can still not be erased, replace the ECM.
P1696 &	Authentication failed or Invalid Transponder detected- Replace faulty key or code new key
P1698	
P1697	Tester message invalid- clear code. If code re-occurs, seek new software for tester or replace the tester.
P1800	Immobiliser antenna error
P1801	Immobiliser transponder error
P1803	Immobiliser ECM signal error
P1805	Immobiliser EPROM error







System Application Guide

VEHICLE	Displac	TYPE	EMS	Immobilizer
CENTENNIAL	3.5L	SIGMA DOHC	MELCO	Shinchang
(LZ)	4.5L	OMEGA DOHC	MELCO	Shinchang
TERRACAN	2.5L	DIESEL TCI(D4BH)	COVEC,MECHA	Shinchang
(HP)	3.5L	SIGMA DOHC	MELCO	Shinchang
	2.9L	J3 (COMMON RAIL)	DELPHI	SMARTRA
MATRIX	1.6L	ALPHA DOHC	BOSCH	SMARTRA
(FC)	1.8L	BETA DOHC	SIEMENS	SMARTRA
	1.5L	D (COMMON RAIL)	BOSCH	SMARTRA
GK	1.6L	ALPHA DOHC	BOSCH	SMARTRA
	2.0L	BETA DOHC	SIEMENS	SMARTRA
	2.7L	DELTA DOHC	SIEMENS	SMARTRA
SONATA	2.0L	SIRIUS-II DOHC	MELCO	Shinchang
(EF-B)	2.4L	SIRIUS-II DOHC	MELCO	Shinchang
	2.7L	DELTA DOHC	SIEMENS	Shinchang
VEHICLE	Displac	TYPE	EMS	lmmobilizer
XG 25, 30	2.5L	DELTA DOHC	SIEMENS	Shinchang
		SICMA DOLLO	MELCO	
(XG)	3.0L	SIGMA DOHC	MELCO	Shinchang
(XG) ACCENT	3.0L 1.3L	ALPHA SOHC	BOSCH	Shinchang SMARTRA
ACCENT	1.3L	ALPHA SOHC	BOSCH	SMARTRA
ACCENT	1.3L 1.5L	ALPHA SOHC ALPHA SO/DO	BOSCH BOSCH	SMARTRA SMARTRA
ACCENT (LC)	1.3L 1.5L 1.6L	ALPHA SOHC ALPHA SO/DO ALPHA DOHC	BOSCH BOSCH BOSCH	SMARTRA SMARTRA SMARTRA
ACCENT (LC)	1.3L 1.5L 1.6L 2.0L	ALPHA SOHC ALPHA SO/DO ALPHA DOHC SIRIUS-II DOHC	BOSCH BOSCH BOSCH MELCO	SMARTRA SMARTRA SMARTRA Shinchang
ACCENT (LC)	1.3L 1.5L 1.6L 2.0L 2.7L	ALPHA SOHC ALPHA SO/DO ALPHA DOHC SIRIUS-II DOHC DELTA DOHC	BOSCH BOSCH BOSCH MELCO SIEMENS	SMARTRA SMARTRA SMARTRA Shinchang Shinchang
ACCENT (LC) TRAJET (FO)	1.3L 1.5L 1.6L 2.0L 2.7L 2.0L	ALPHA SOHC ALPHA SO/DO ALPHA DOHC SIRIUS-II DOHC DELTA DOHC D (COMMON RAIL)	BOSCH BOSCH BOSCH MELCO SIEMENS BOSCH	SMARTRA SMARTRA SMARTRA Shinchang Shinchang SMARTRA
ACCENT (LC) TRAJET (FO) SANTA FE	1.3L 1.5L 1.6L 2.0L 2.7L 2.0L 2.0L	ALPHA SOHC ALPHA SO/DO ALPHA DOHC SIRIUS-II DOHC DELTA DOHC D (COMMON RAIL) SIRIUS-II DOHC	BOSCH BOSCH BOSCH MELCO SIEMENS BOSCH MELCO	SMARTRA SMARTRA SMARTRA Shinchang Shinchang SMARTRA Shinchang
ACCENT (LC) TRAJET (FO) SANTA FE	1.3L 1.5L 1.6L 2.0L 2.7L 2.0L 2.0L 2.4L	ALPHA SOHC ALPHA SO/DO ALPHA DOHC SIRIUS-II DOHC DELTA DOHC D (COMMON RAIL) SIRIUS-II DOHC SIRIUS-II DOHC	BOSCH BOSCH BOSCH MELCO SIEMENS BOSCH MELCO MELCO	SMARTRA SMARTRA SMARTRA Shinchang Shinchang SMARTRA Shinchang SMARTRA Shinchang
ACCENT (LC) TRAJET (FO) SANTA FE	1.3L 1.5L 1.6L 2.0L 2.7L 2.0L 2.0L 2.4L 2.7L	ALPHA SOHC ALPHA SO/DO ALPHA DOHC SIRIUS-II DOHC DELTA DOHC D (COMMON RAIL) SIRIUS-II DOHC SIRIUS-II DOHC DELTA DOHC	BOSCH BOSCH BOSCH MELCO SIEMENS BOSCH MELCO MELCO SIEMENS	SMARTRA SMARTRA SMARTRA Shinchang Shinchang SMARTRA Shinchang Shinchang Shinchang
ACCENT (LC) TRAJET (FO) SANTA FE (SM)	1.3L 1.5L 1.6L 2.0L 2.7L 2.0L 2.0L 2.4L 2.7L 2.0L	ALPHA SOHC ALPHA SO/DO ALPHA DOHC SIRIUS-II DOHC DELTA DOHC D (COMMON RAIL) SIRIUS-II DOHC SIRIUS-II DOHC DELTA DOHC DELTA DOHC DICOMMON RAIL)	BOSCH BOSCH BOSCH MELCO SIEMENS BOSCH MELCO MELCO SIEMENS BOSCH BOSCH MELCO	SMARTRA SMARTRA SMARTRA Shinchang Shinchang SMARTRA Shinchang Shinchang Shinchang Shinchang Shinchang





System Application Guide

_					
	VEHICLE	Displac	TYPE	EMS	Immobilizer
	SONATA	1.8L	SIRIUS-SOHC	MELCO	Shinchang
	(Y-3)		SIRIUS-DOHC	MELCO	Shinchang
		2.0L	SIRIUS-SOHC	MELCO	Shinchang
			SIRIUS-DOHC	MELCO	Shinchang
		3. 0 L	V-6	MELCO	Shinchang
	EF SONATA	2.0L	SIRIUS-II DOHC	MELCO	Shinchang
	(EF)	2.4L	SIRIUS-II DOHC	MELCO	Shinchang
		2.5L	DELTA DOHC	SIEMENS	Shinchang
	ATOS	1.0L	EPSILON SOHC	HYUNDAI	Shinchang
	ATOS(01MY~)	1.0L	EPSILON SOHC	BOSCH	SMARTRA
	GETZ	1.1L	EPSILON SOHC	BOSCH	SMARTRA
		1.3L/1.5L	ALPHA SO/DO	BOSCH	SMARTRA
	VEHICLE	Displac	TYPE	EMS	I mmobilizer
	ACCENT	1.3L	Alpha-SOHC	CARB	Shinchang
	(X-3)		Alpha-SOHC	SIEMENS	Shinchang
		1.5L	Alpha-SOHC	BOSCH	Shinchang
			Alpha-DOHC	BOSCH	Shinchang
	ELANTRA	1.6L	Beta-DOHC	SIEMENS	Shinchang
	(RD)	1.8L	Beta-DOHC	SIEMENS	Shinchang
			Beta-DOHC	BOSCH	Shinchang
	COUPE	1.8L	Beta-DOHC	SIEMENS	Shinchang
	(TIBURON)		Beta-DOHC	BOSCH	Shinchang
		2. 0 L	Beta-DOHC	SIEMENS	Shinchang
			Beta-DOHC	BOSCH	Shinchang

VVVVV.ADUSA.US



TIPS & HINTS





Ix35 Proximity System

When programming the proximity keys on a ix35, the procedure refers to inserting the proximity key into the slot. The slot in located in the centre console as shown below.

Note: The slot is spring loaded and the key must be inserted correctly. To remove the key the key is pushed down slightly against the spring loading to remove it.





GENERAL TIPS and HINTS

LOCK TIME

SMARTRA PETROL: 1 HOUR IGNITION OFF

SMARTRA DIESEL: 1 HOUR IGNITION ON

WWW.ADVANCED-DIAGNOSTICS.CO.UK

WWW.ADUSA.US

ADVANCED DIAGNOSTICS

REMOTE PROGRAMMING





MANUAL REMOTE CONTROL PROGRAMMING PROCEDURE

- 1. Remove the lower crash panel and locate the remote control receiver unit.
- 2. The switch on the side of the unit should be switched to the SET position and the ignition on.
- 3. Press the lock button or unlock button on all transmitters quickly.
- 4. Then turn ignition OFF.
- 5. Then test remote control



Type 1 & 4



Type 2 & 5

Santa Fe (01 to 06) Sonata (99 to 06) XG300 (00 to 01) XG350 (02 to 06)

Note A. A maximum of 2 remotes can be programmed

Procedure

- 1. Ensure memory switch is in OFF position on the control module.
- 2. Switch ignition ON.
- 3. Wait 5 seconds & put memory switch in SET position.
- 4. Press the Lock button of the remote.
- 5. To program a second remote, press second remote Lock button.
- 6. Set memory switch to OFF
- 7. Switch ignition OFF

WWW.ADVANCED-DIAGNOSTICS.CO.UK

WWW.ADUSA.US



Copyright 2012

